 


# AURA ADVANCED INSTRUCTIONS: DISTANCE RANGE SETTING

Two units are required to perform distance range setting: a **TEACHER** and a **STUDENT**. To set a unit as a **TEACHER**, the unit must be connected via the USB and any other **TEACHER** or **STUDENT** unit must be out of range.


To set as **TEACHER**: While the unit is charging via USB, **PRESS** and **HOLD** button for 10 seconds. *N.B. TEACHER does not learn the new distance it is teaching.*

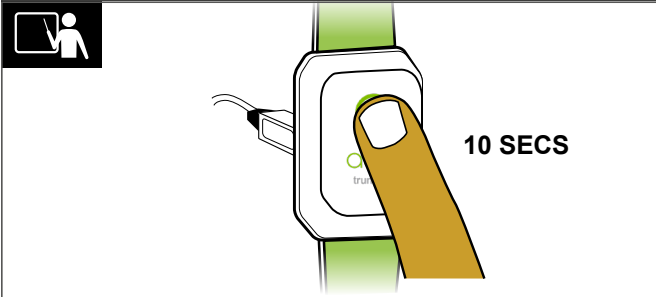


When in **TEACHER** mode the LED lights solid blue. *N.B. there cannot be more than one TEACHER active in the vicinity.*



Place the **STUDENT** the required alert distance away from the **TEACHER** (between 0.5–3.0 meters/1.5–10ft).

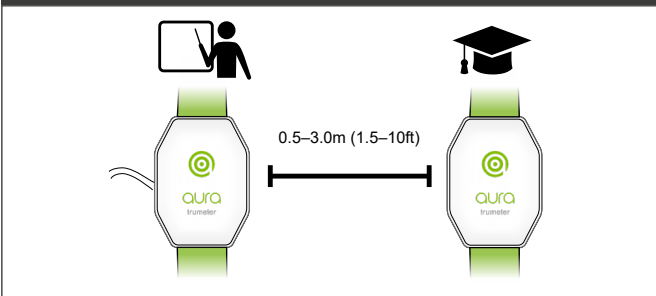

To set a **STUDENT**: While the unit is in Normal mode **PRESS** and **HOLD** button for 10 seconds. **STUDENT** must **NOT** be indicating low battery.

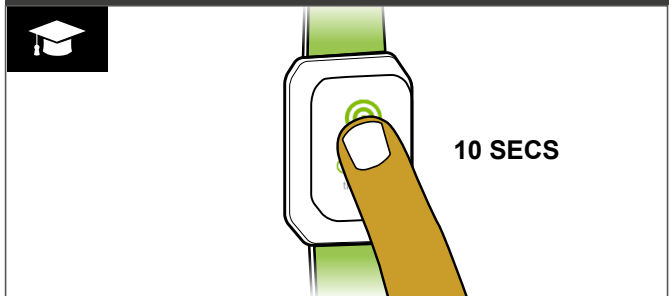

If a **TEACHER** is in range the unit will go into **STUDENT** mode and flash the blue LED quickly. The **STUDENT** is now learning the alert distance.



When the alert distance is set the blue LED will return to flashing slowly and the unit is now ready to use at the new alert distance.



If a **STUDENT** fails to "learn" it will flash red quickly instead of blue.



To exit **TEACHER** Mode, unplug the USB cable.

