


Aura Instruction Manual



aura
trumeter

The Aura personal proximity sensor is designed to tackle the challenge of social distancing by helping to ensure a minimum distance.

Each unit is pre-set to an alert distance of 2m (6.5ft). Details on how to change the alert distance can be found at www.trumeter.com/aura


To switch ON: PRESS and HOLD the  button for 3 seconds - Blue LED lights up AND button vibrates. The LED will flash blue every 3 seconds when unit is on. The unit will not turn on when connected and charging.

3 SECS




To switch OFF: PRESS and HOLD the  button for 3 seconds. The Blue LED will flash twice.


3 SECS

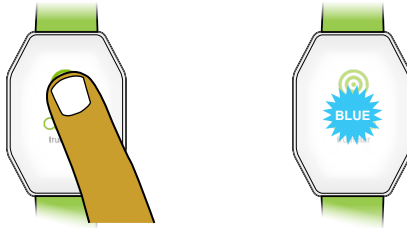

When within two meters of another Aura the red LED will light and the Aura will vibrate and sound an alert.

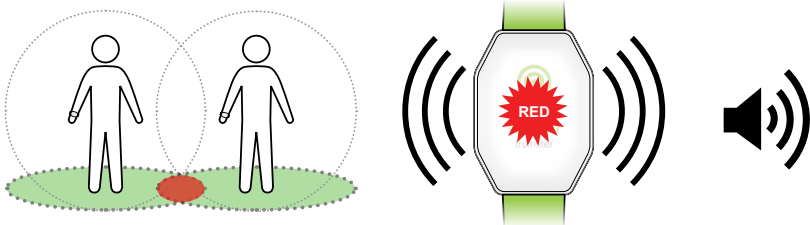


To charge: connect the unit using a Micro-USB charging cable. Charging takes approximately 1 hour. When charging, the LED flashes red. When fully charged, the LED is a steady red.

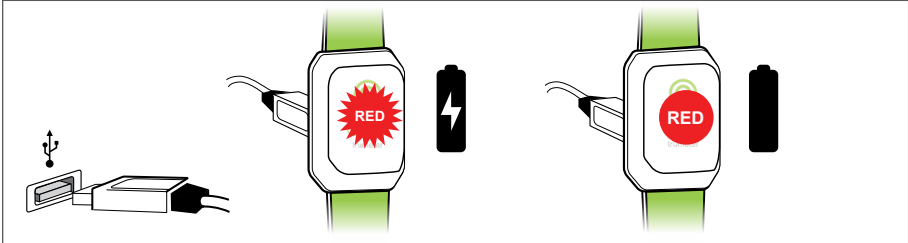


Aura can be used up to 12 hours on a single charge. When battery is low the LED will flash red and device will vibrate every 1 minute.



When first switched on, Aura doesn't become active until it is more than 2 meters away from any other unit.

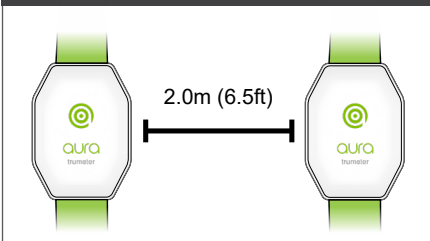

For best results the face of Aura should be worn on the outside of the wrist.

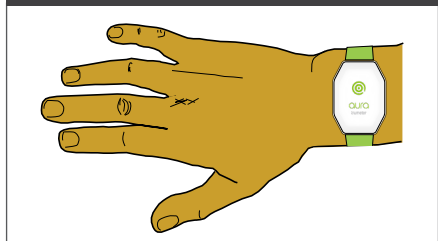

This device contains FCC ID: 2AQ33-DWM1004

This device complies with Part 15.107 and 15.109 Class B of the FCC Rules CFR47: October 2010.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING
CAUTION: CHOKING HAZARD - small parts.
Not suitable for children under 3 yrs.



Trumeter (Europe)

Pilot Mill, Alfred Street, Bury, Lancashire
BL9 9EF, United Kingdom
Tel: +44 161 674 0960
Email: sales.uk@trumeter.com

Trumeter (Americas)

6601 Lyons Rd, SUITE H-7, Coconut Creek,
Florida, 33073, USA
Tel: +1 954 725 6699
Email: sales.usa@trumeter.com

Trumeter (Asia Pacific)

Innovative Design Technologies Sdn. Bhd,
Lot 5881, Lorong lks Bukit Minyak 1, Taman
Perindustrian lks, 14000 Bukit Tengah,
Penang, Malaysia